



OPERATING


DRYING PRINTS

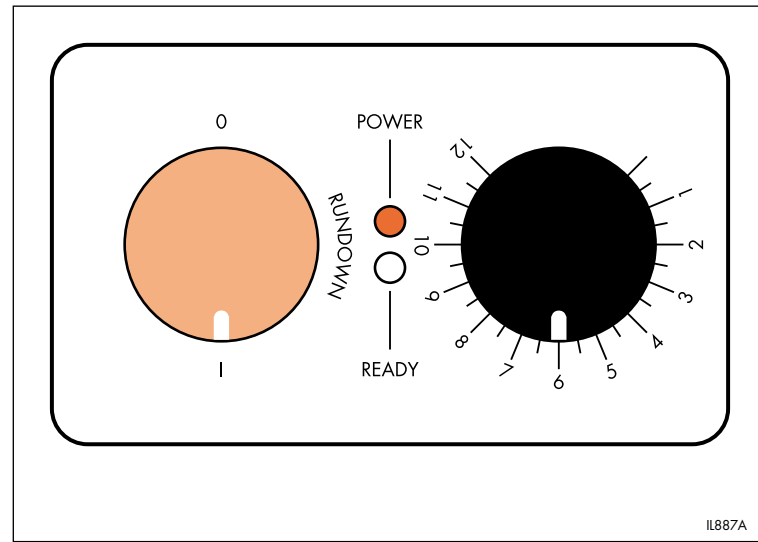

1 Switch the electrical supply on. Turn the dryer control to '1'. The red 'POWER' light illuminates.

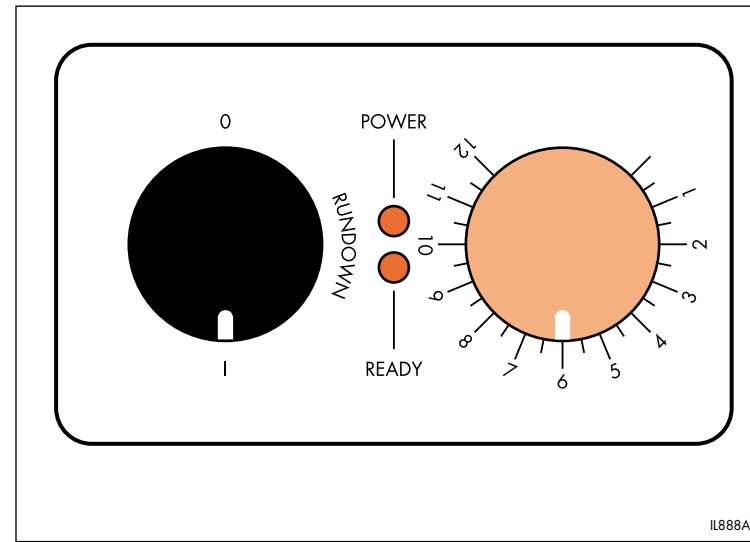


2 Allow about 1½ minutes for the orange 'READY' light to switch on. As a guide, set the speed control to position 6 to dry resin coated paper sheets.

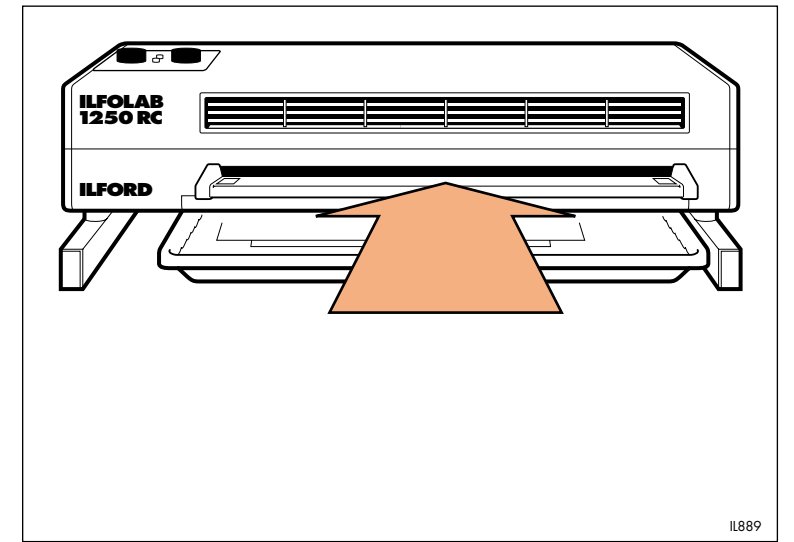


3 Feed prints emulsion side up. Ensure prints are fed squarely. Feed small prints with the short edge leading. Do not overlap one print with another - allow 2 seconds between the trailing edge of one print and the leading edge of the next.

SWITCHING OFF

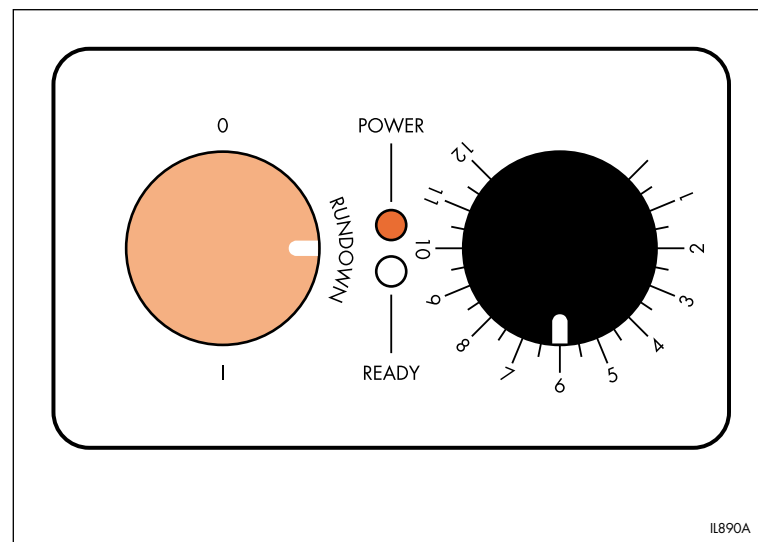

1 Turn the dryer control to 'RUNDOWN'. If the dryer is to be used again later the same day, the control can be left in this position.

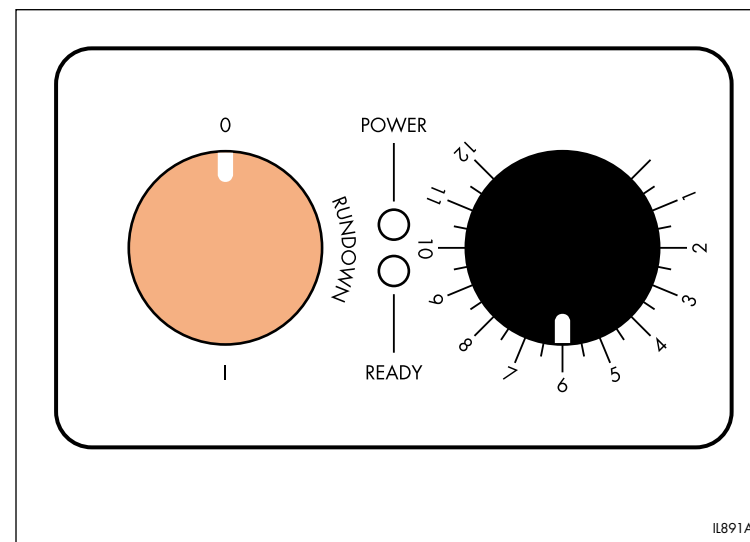

2 To switch the dryer off completely, carry out operation 1 and wait for the fans and main drive to stop. Then turn the dryer control to '0'. Switch the electrical supply off.

DRYER SPEED RANGE

1 Control switch selected to '1'
 Minimum speed setting : 17.5cm/min (7 inches/min)
 Maximum speed setting : 126cm/min (49.6 inches/min)