

ILFOLAB MG2950 SIMPLIFIED INSTRUCTIONS



USING THE PROCESSOR



1 Turn on the water and electrical supplies to the processor.

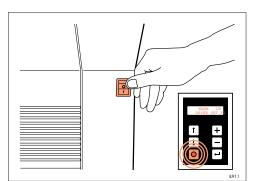


2 Switch the processor on. The display reads W A R M and the ready LED flashes, UΡ indicating the processor is not

DRYER PROGRAM P1* +003%


3 Check the required dryer program has been selected (see section 2.5c).


L912

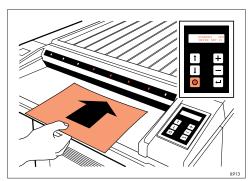

4 When the display reads STANDBY OFF and the LED is steady on, the processor is readv , ready for use. Feed sheets emulsion side down.

SWITCHING OFF

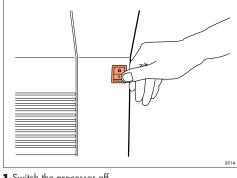



2 Turn off the electrical supply then the water supply to the processor.

1 Switch the processor off.

MAINTENANCE CHECKLIST

Daily maintenance

Check the water and electrical supplies are on Clean the rollers by processing a few sheets of unfogged paper Clean the feed tray Add 12ml (0.4 US fl oz) to wash tank at the end of each day

Weekly maintenance Clean the processing racks Check rollers and guides for damage Check for algae in wash tank and spray bar

Six monthly maintenance Drain and clean the processing tanks Check operation of smoke detector

> Printed in England 94071.2A.GB June 1998